



QUICK STEPS TO EASY SEWING ON YOUR WHITE

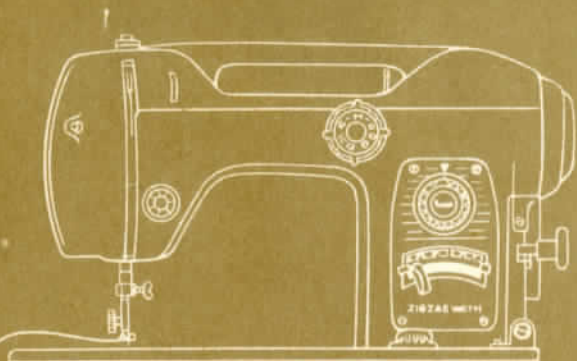

In this Ready Reference there is enough valuable information to start you sewing and possibly to save you the cost of an unnecessary service call.


Please consult the instruction book packed with your machine for specific, detailed information.

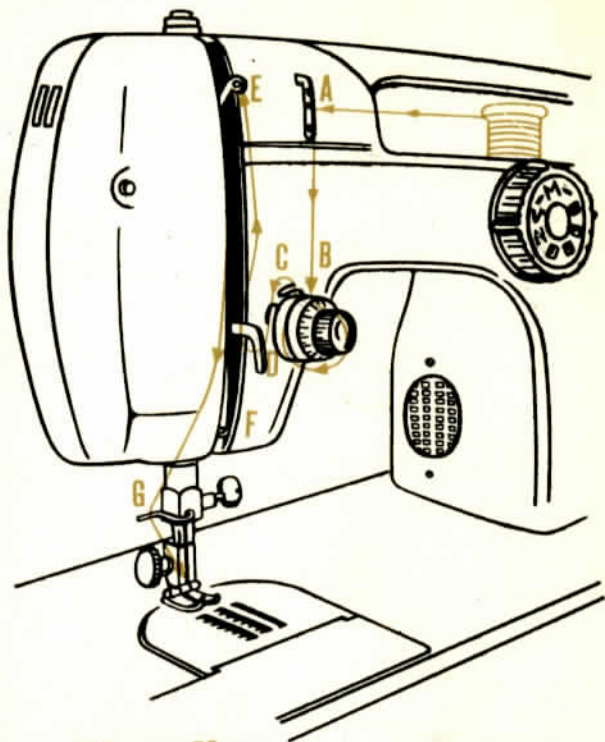

Threading

- 1 - Place thread on spool pin
- 2 - lead thread under handle and through arm thread guides A
- 3 - between tension discs B from right to left

- 4 - into check spring C
- 5 - then down under thread bar D
- 6 - up into take-up lever E from right to left
- 7 - down into thread guide F
- 8 - through needle bar thread guide G
- 9 - and into needle from front to back.

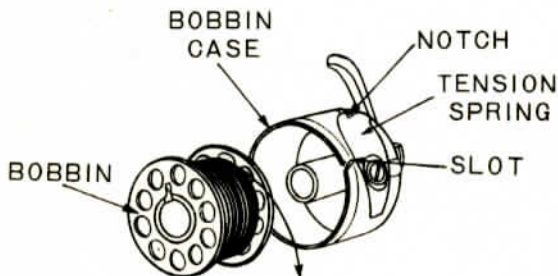

Threading Bobbin


- 1 - Be sure bobbin is wound evenly.
- 2 - Place bobbin in case with thread pulling off in clock-wise direction.
- 3 - Pull thread through slot and under spring until it slips into notch.



Pulling up Bobbin Thread

Hold needle thread loosely. Turn hand wheel toward you. Bobbin thread will come up in a loop.

Place both threads under presser foot toward back of machine.

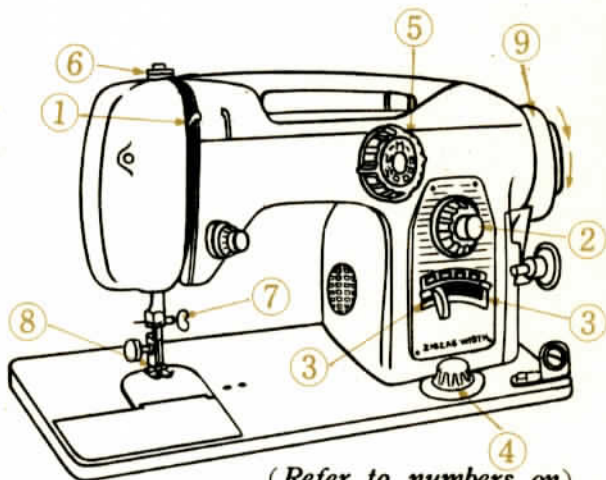

(Refer to numbers on
this drawing for (✓)
Points)

Straight Sewing be sure that :

- ✓ 1 - Take-up is in highest position.
- ✓ 2 - Stitch length is set beyond Number 1.
- ✓ 3 - Set stitch width locks at 0.
- ✓ 4 - Feed knob is turned to high.


- ✓ 5 - Decorative stitch knob is set at M.
- ✓ 6 - Presser bar cap is down.
- ✓ 7 - Needle clamp is tightened.
- ✓ 8 - Presser foot is secure and lowered on-to fabric.
- ✓ 9 - Hand wheel turns toward you.

Zigzag Stitching,

To change from straight stitching to zigzag move the stitch width from 0 to any setting up to 5. To move locks push tab slightly and slide to chosen position, then release. For specific directions on embroidery, buttonholes, etc., please consult your instruction book.

Check the Needle


Never use a dull or bent needle. Insert new one, flat side to back, as far up in needle clamp as it will go.

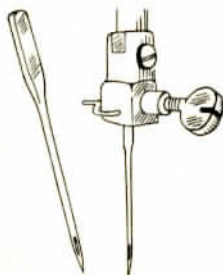

If Machine Binds

Clean hook assembly as follows :

- 1 - With take-up lever in highest position tilt head back on hinges and remove bobbin case.

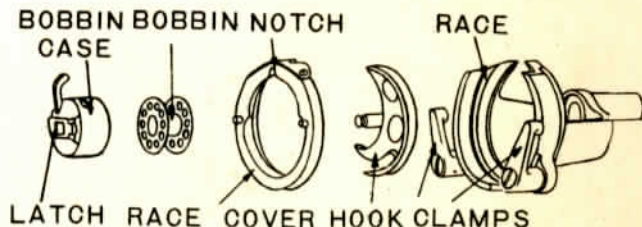

- 2 - Turn clamps outward and remove race cover.
- 3 - Remove hook.
- 4 - Clean thread and lint from all parts including race.
- 5 - Run a drop of oil along rim of hook.
- 6 - Replace hook, then race cover.
Snap clamps into place.
- 7 - Grasp threaded bobbin case by latch and replace, fitting tongue into notch of race cover.

WHITE SEWING MACHINES